

# Control manual de ventiladores Dell Poweredge

```
ipmitool -I lanplus -H 192.168.1.111 -U usuario -P Password raw 0x30 0x30 0x01 0x00
ipmitool -I lanplus -H 192.168.1.111 -U usuario -P password raw 0x30 0x30 0x02 0x05 0xA
ipmitool -I lanplus -H 192.168.1.111 -U usuario -P password raw 0x30 0x30 0x02 Num.Ventilador Velocidad
```

## Valores de velocidad

```
10% = 0xA
11% = 0xB
12% = 0xC
13% = 0xD
14% = 0xE
15% = 0xF
16% = 0x10 (~3,300 RPM)
17% = 0x11
18% = 0x12
19% = 0x13
20% = 0x14
21% = 0x15 (~4,000 RPM)
22% = 0x16
23% = 0x17
24% = 0x18
25% = 0x19
26% = 0x1A
27% = 0x1B
28% = 0x1C (~5,000 RPM)
29% = 0x1D
30% = 0x1E
31% = 0x1F
32% = 0x20
33% = 0x21
34% = 0x22
35% = 0x23 (~6,000 RPM)
36% = 0x24
37% = 0x25
38% = 0x26
39% = 0x27 (~6,500 RPM)
40% = 0x28
41% = 0x29
42% = 0x2A
43% = 0x2B
```

44% = 0x2C  
45% = 0x2D (~7,300 RPM)  
46% = 0x2E  
47% = 0x2F  
48% = 0x30  
49% = 0x31  
50% = 0x32 (~8,000 RPM)  
51% = 0x33  
52% = 0x34  
53% = 0x35  
54% = 0x36  
55% = 0x37  
56% = 0x38  
57% = 0x39  
58% = 0x3A  
59% = 0x3B  
60% = 0x3C (~9,400 RPM)  
61% = 0x3D  
62% = 0x3E  
63% = 0x3F  
64% = 0x40  
65% = 0x41  
66% = 0x42  
67% = 0x43  
68% = 0x44  
69% = 0x45  
70% = 0x46 (~10,800 RPM)  
71% = 0x47  
72% = 0x48  
73% = 0x49  
74% = 0x4A  
75% = 0x4B  
76% = 0x4C  
77% = 0x4D  
78% = 0x4E  
79% = 0x4F  
80% = 0x50 (~12,100 RPM)  
81% = 0x51  
82% = 0x52  
83% = 0x53  
84% = 0x54  
85% = 0x55  
86% = 0x56  
87% = 0x57  
88% = 0x58  
89% = 0x59  
90% = 0x5A (~13,300 RPM)  
91% = 0x5B  
92% = 0x5C  
93% = 0x5D  
94% = 0x5E

95% = 0x5F  
96% = 0x60  
97% = 0x61  
98% = 0x62  
99% = 0x63  
100% = 0x64 (15,000 RPM)

From:

<https://www.knoppia.net/> - **Knoppia**

Permanent link:

<https://www.knoppia.net/doku.php?id=dellventiladores>

Last update: **2025/02/06 19:15**

